

Communicall Vision Quick Reference Card

Command Key Sequences

- 1* Sound call tone.
- 0# End a call.
- 1# Switch on-site.
- 2# Switch off-site.
- 3# Switch momentarily off-site.
- 4# Check on-site/off-site status.
- 5# Get details of most recent call.
- 6# Get details of waiting call.
- 7# Open a door.
- 8# Increase speech module volume.
- 9# Decrease speech module volume.
- # Tone Switching - switch between listening and speaking.

Alarm Functions

Answering a call

- Answer \ and listen.
- Press * to speak to resident.
- To hear alarm again press 5#.
- Press 0# to clear connection.
- Press 0# again to disconnect from Communicall.

Calling a Speech Module

- Call Communicall, then resident's speech module.
- Press '*' key and speak.

All the reassurance you need

Tunstall

900 Commands

- 952-959 Dialling to pre-set remote Schemes/Dispersed Alarms (tone switched).
- 974 Speak to Control Centre.
- 975 Switch to 'On-Site'.
- 976 Switch to 'Off-Site'.
- 978 Speak On/Off-Site Status.
- 988 Check for dial tone at TIC card (ability to go 'off-site').
- 900 800 Reset the system.

Functions Using Communicall's Telephone Exchange

Calling Wardens & External Numbers

Dial warden's number (9 for an outside line). No alarm calls can be received during call.

Transferring Calls

Press the 'R' key and dial wardens Number. Once answered hang-up.

Diverting Zones

Press \, then # followed by extension number to divert, press 1 and hang-up. To stop diversion enter \...#<your own extension>0 \.

Programming Terminal

- Must be plugged in at all times in a place where it will be heard.
- Used for Communicall programming operations.

Locking the phone

- To lock press MENU and then *.
- To unlock press MENU and *.

Tel. 01977-661234

<http://www.tunstall.co.uk/>