


Ensure the wires do not touch the body of the sounder when installed

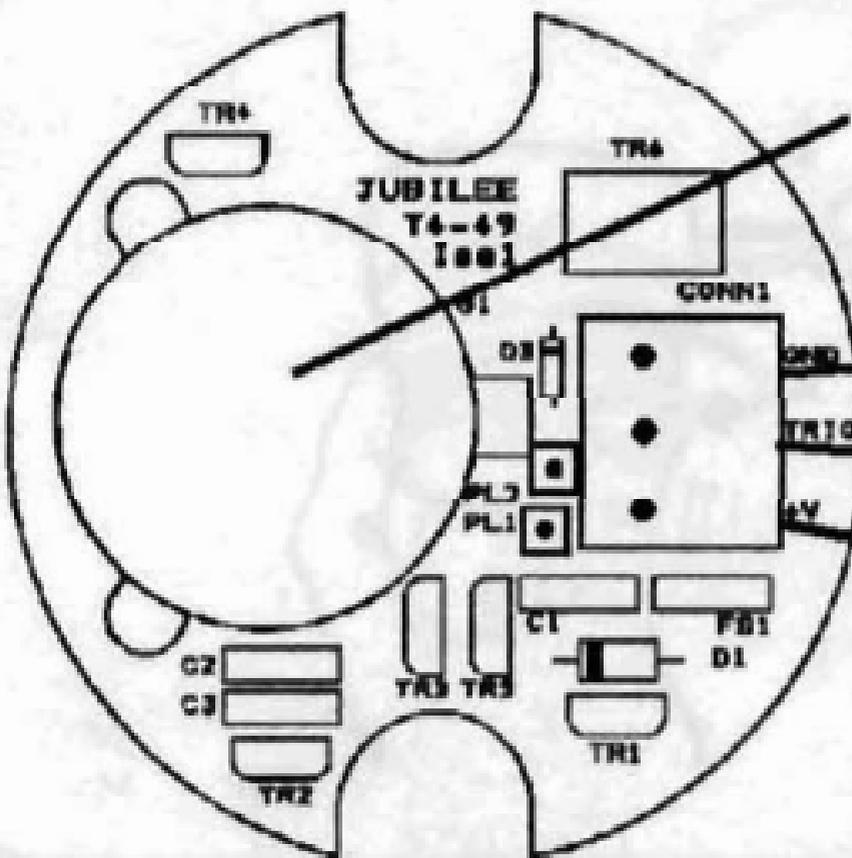

BLACK — 0v

GREEN — TRIGGER

RED — +24v

92100/18A Beacon/Sounder unit
Manufactured for Tunstall Telecom
by Jubilee Electronics Ltd


Connect wires from Sounder base to 24V input on Beacon

Check polarity Black 0V, Red +24V

See over for instructions on fitting and removing beacon from base.

When fitting Beacon to Sounder base avoid trapping wires between the two by rotating 1 turn until wires can be stowed in the beacon recess.

FITTING

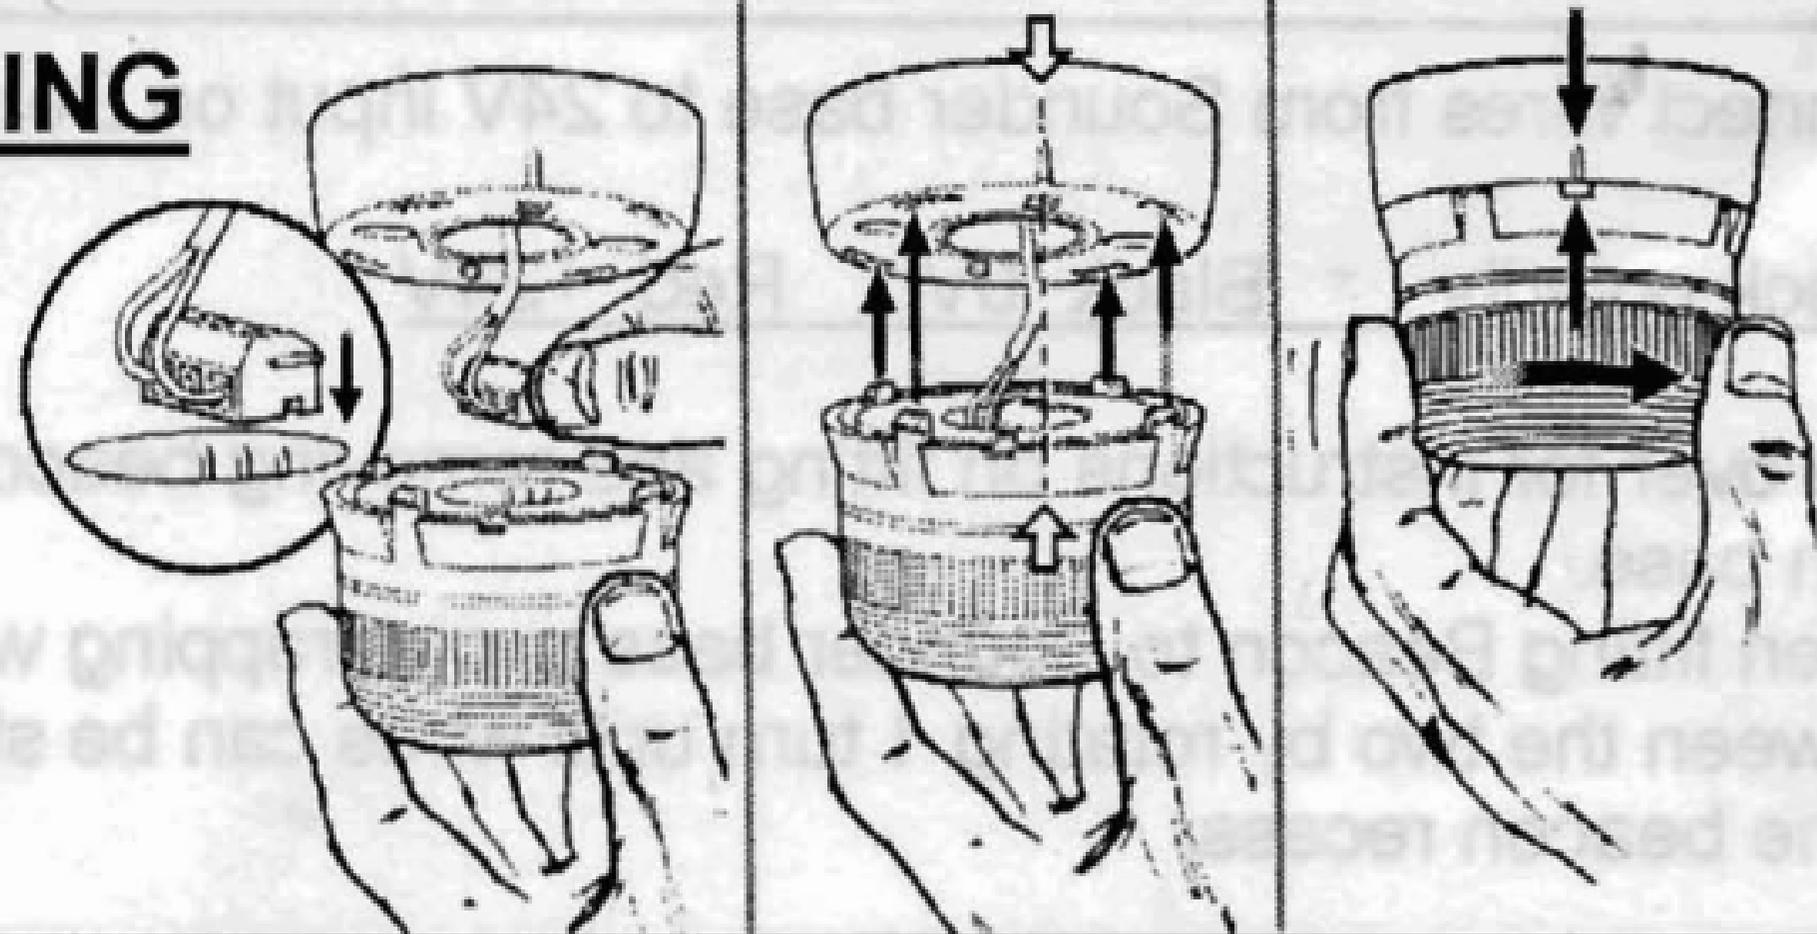

REMOVAL

1. Insert terminal screwdriver into hole in base to release lock
2. Rotate anticlockwise to remove beacon - unplug wires.

